
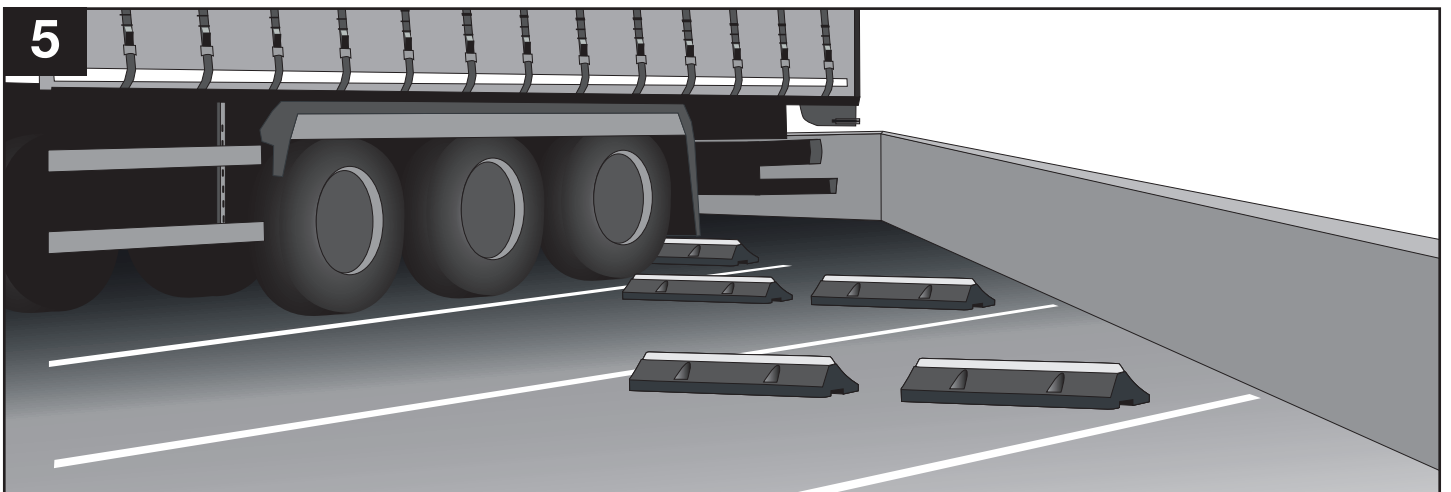
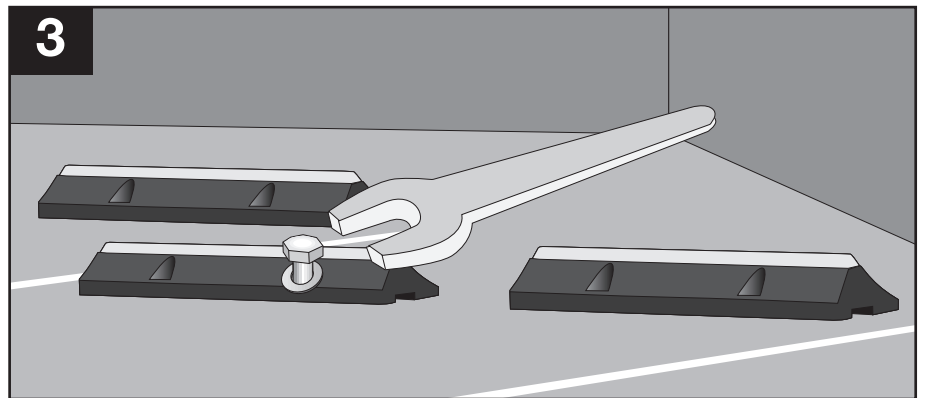
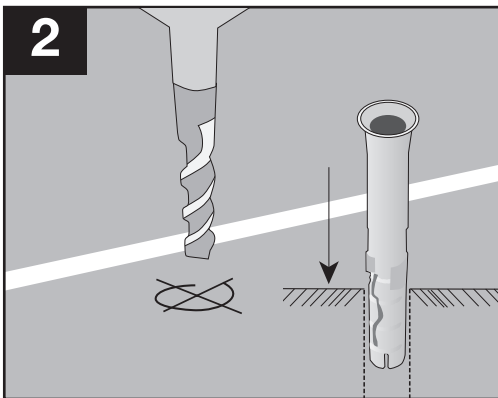
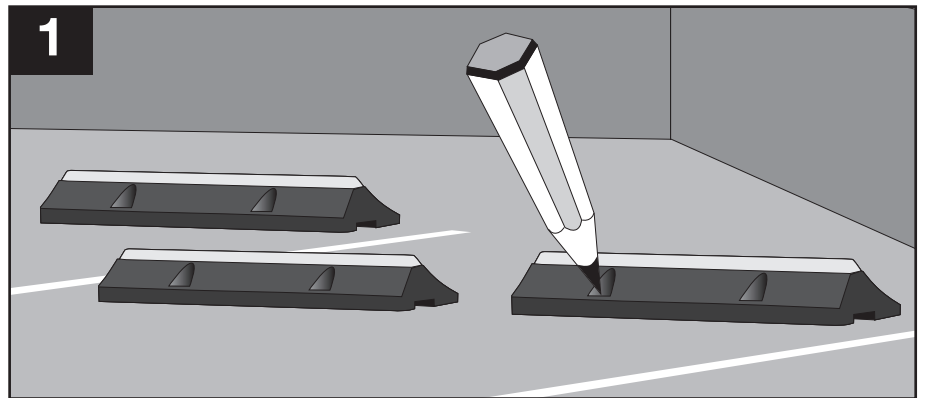
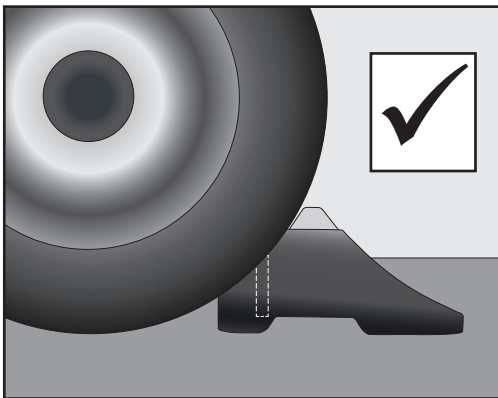


# Montageanleitung MORION Radstopp Heavy Duty ECO

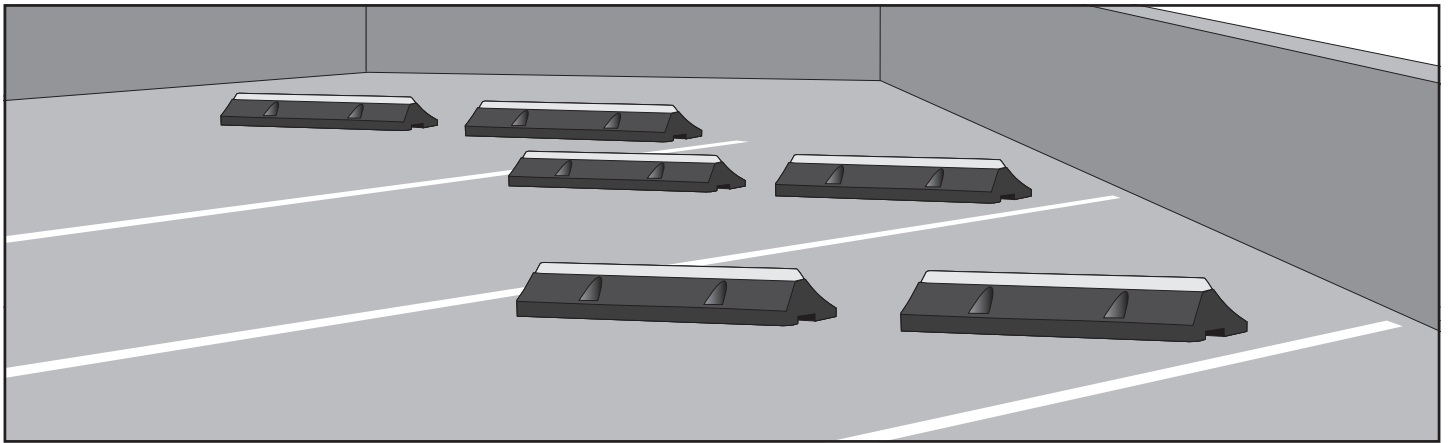

WM 1649